

SURFACE PREPARATION (If Required)

- Minor floor surface repair, patching: Flextile Flextile-Patch
- Floor Levelling: 59 Flex Flo / 5900 Flex Flo Plus Self Levelling Underlayment

** For a complete listing of Flextile products and accessories including Sound Control and further setting options, please visit www.flextile.net*

Maintenance Guide for SPC Flooring

(The information below was provided by the manufacturer)

- Regularly sweep the floor to remove loose dirt or grit as these can cause fine scratches.
- For a thorough clean, a range of pH neutral cleaning products are available. Avoid the use of regular household cleaners and bleach-based detergents. These could make the floor slippery or cause discolouration.
- Always mop up spills as soon as possible, to reduce the risk of slipping and possible staining.
- Use entrance mats to protect against grit and moisture. Ensure they are of non-staining variety (not rubber-backed) to prevent any discolouration of the floor.
- Avoid sliding or dragging furniture or other objects across the floor - use floor protector pads to prevent scratching.
- Use large castor cups or other means to protect against indentation from heavy furniture.
- Maintain room temperature between 65-85°F* (18-27°C) for optimum performance.
- Do not subject this product to standing water. This will present a slip hazard.
- Care must be taken when using underfloor heating to avoid damage to the floor caused by localised 'hot spots/ thermal blocks'. Care must also be taken in placing rugs, and items of furniture which do not allow hot air circulation.

ASTM standards require installation in range 65-85°F; elsewhere the temperature should be 18-27°C.

*** Where the flooring run exceeds 50 ft. (15 m) in width or length, a 5/16" (8 mm) expansion joint should be used and repeated thereafter.*

